
LOCK DOCK

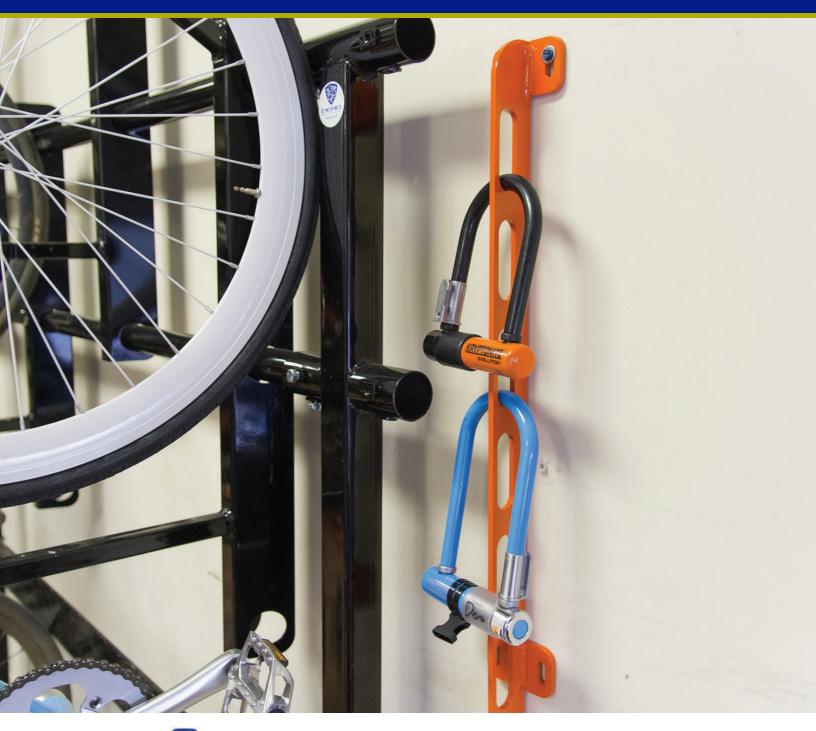



Hang 'Em Up

The Dero Lock Dock is a useful addition to your secure bike room. The Dero Lock Dock will keep your staff or regular clients' locks readily available and eliminate the need for them to be carried back and forth everyday.



LOCK DOCK



FINISH OPTIONS

Galvanized



Stainless



Powder Coat

White	Black	Light Gray RAL 7042	Deep Red RAL 3003	Yellow RAL 1023
CNH Bright Yellow	Orange	Blue	Sky Blue	Hunter Green
	RAL 2004	RAL 5005	RAL 5015	RAL 6005
Light Green	Green	Sepia Brown	Bronze	Silver
RAL 6018	RAL 6016	RAL 8014		9007
Dark Purple	Flat Black	Wine Red RAL 3005	Beige RAL 1001	Iron Gray 7011

LOCK DOCK

Submittal Sheet



CAPACITY N/A

MATERIALS .25" steel plate

FINISHES Galvanized

An after fabrication hot dipped galvanized finish is our standard option.

Powder Coat

Our powder coat finish assures a high level of adhesion and durability by following these steps:

1. Sandblast

2. Epoxy primer electrostatically applied

3. Final thick TGIC polyester powder coat

Stainless Steel: 304 grade stainless steel material finished in

either a high polished shine or a satin finish.

MOUNT **OPTIONS** **Wall Mount**

Flange mount has six 1/4" flanges - 6 anchors.

It is the responsibility of the installer to ensure that all base materials into which the Lock Dock will be installed can support the Lock Dock with 11 locks and will not be damaged

by any required installation procedures.

SETBACKS



DOWNTOWN RACK

Installation Instructions


TOOLS NEEDED

Tape Measure
Marker or Pencil
Masonry Drill Bit
Drill (Hammer drill recommended)
Hammer
Wrench 9/16"
Level

RECOMMENDED BASE MATERIAL

Solid concrete is the best base material for installation. To ensure the proper anchors are shipped with your rack, ask your Dero Rack representative which anchor is appropriate for your application. Be sure nothing is underneath the base material that could be damaged by drilling.

1

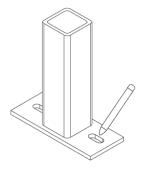


Place the rack in the desired location. Use a marker or pencil to outline the holes of the flange onto the base material.

2




Drill the holes in accordance with the specifications shipped with the anchors. Make sure the holes are at least 3" away from any cracks in the base material.

3

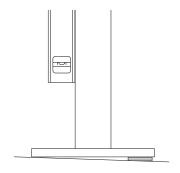

Use washers to level rack if necessary.

4

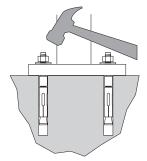

Tap in anchors and follow your specific anchor instructions provided with the rack.

DOWNTOWN RACK

Installation Instructions


TOOLS NEEDED

Tape Measure
Marker or Pencil
Masonry Drill Bit
Drill (Hammer drill recommended)
Hammer
Wrench 9/16"
Level

RECOMMENDED BASE MATERIAL

Solid concrete is the best base material for installation. To ensure the proper anchors are shipped with your rack, ask your Dero Rack representative which anchor is appropriate for your application. Be sure nothing is underneath the base material that could be damaged by drilling.

1

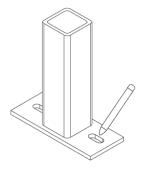


Place the rack in the desired location. Use a marker or pencil to outline the holes of the flange onto the base material.

2




Drill the holes in accordance with the specifications shipped with the anchors. Make sure the holes are at least 3" away from any cracks in the base material.

3

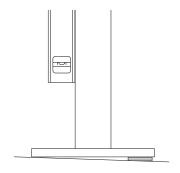

Use washers to level rack if necessary.

4

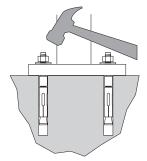

Tap in anchors and follow your specific anchor instructions provided with the rack.