

PUMP STOP



Stand By Your Pump

The Pump Stop holds bikes upright while filling tires with air. It is the perfect accessory to any Dero public air pump.



PRODUCT & PRICING INFO CONTACT

STREETSCAPES
STREETSCAPES.BIZ

Info@streetscapefurniture.com ■ 303.398.7040

PUMP STOP



FINISH OPTIONS


Galvanized




Powder Coat

White	Black	Light Gray RAL 7042	Deep Red RAL 3003	Yellow RAL 1023
CNH Bright Yellow	Orange RAL 2004	Blue RAL 5005	Sky Blue RAL 5015	Hunter Green RAL 6005
Light Green RAL 6018	Green RAL 6016	Sepia Brown RAL 8014	Bronze	Silver 9007
Dark Purple	Flat Black	Wine Red RAL 3005	Beige RAL 1001	Iron Gray 7011

Submittal Sheet

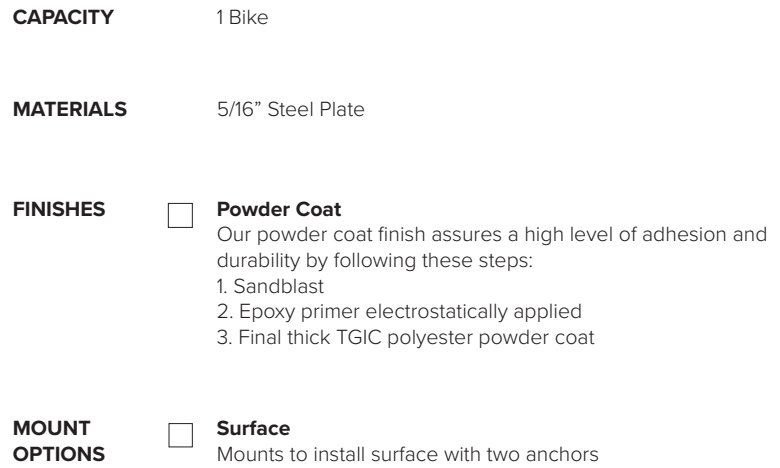

PUMP STOP Setbacks

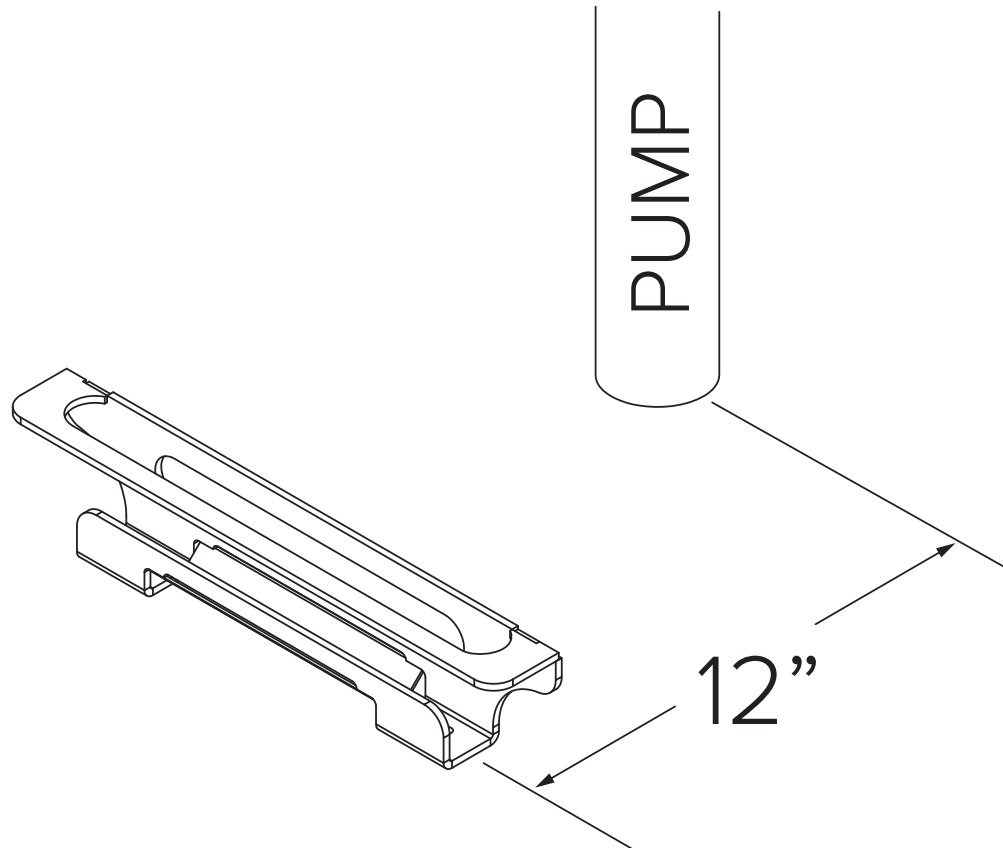

PUMP STOP

Installation Instructions – Surface Mount


TOOLS NEEDED

Tape Measure
Marker or Pencil
Masonry Drill Bit
Drill (Hammer drill recommended)
Hammer
Wrench 9/16"
Level

RECOMMENDED BASE MATERIAL


Solid concrete is the best base material for installation. To ensure the proper anchors are shipped with your rack, ask your Dero Rack representative which anchor is appropriate for your application. Be sure nothing is underneath the base material that could be damaged by drilling.

1

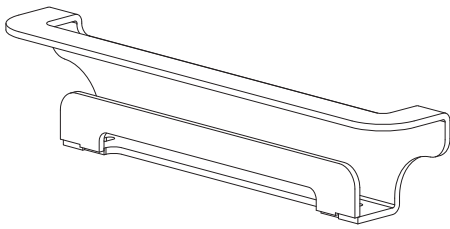


Place the rack in the desired location. Use a marker or pencil to outline the holes of the flange onto the base material.

2

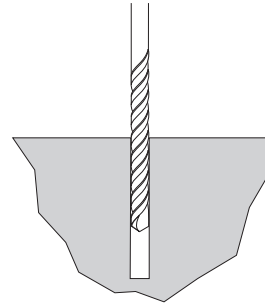


Drill 3/8" diameter holes 3" deep into surface. Make sure the holes are at least 3" away from any cracks in the base material.

3

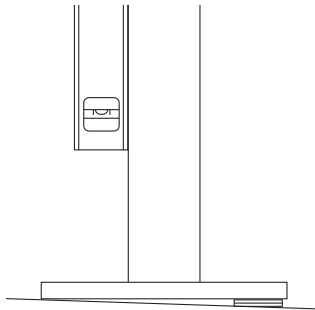

Place rack (and washers to level rack if necessary) over holes.

4

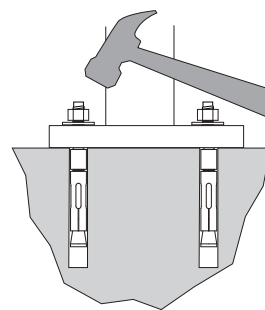

Thread nuts onto anchors, leaving approximately 1/4" of the anchor protruding, and tap into surface. Tighten nuts down to secure rack.