

ULTRA SPACE SAVER SINGLE



Go Vertical

When you can't park your bike horizontally, on the floor or on the ceiling. The Ultra Space Saver Single is your parking solution. A smaller version of our Space Saver Modular System, the Single parks your bike vertically and mounts onto nearly any wall type (except metal studs). U-lock capabilities make this rack great for property managers as well for home storage use. Quick installation only requires 4 anchors drilled into the wall. Save room today with the Ultra Space Saver Single, or check out the whole modular system if you need to park many bikes.

PRODUCT & PRICING INFO CONTACT

 **STREETSCAPES**
STREETSCAPES.BIZ

Info@streetscapefurniture.com ■ 303.398.7040

ULTRA SPACE SAVER SINGLE



- U-lock compatible
- Convert dead space and awkward corners to bike parking
- Rubber coated hook prevents scratching bikes
- Easy installation


FINISH OPTIONS

Powder Coat




TUBE OPTIONS

Round

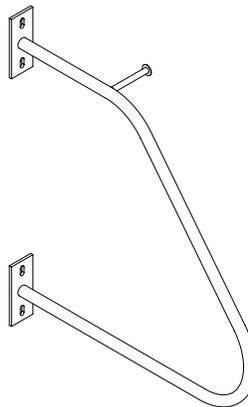


Square

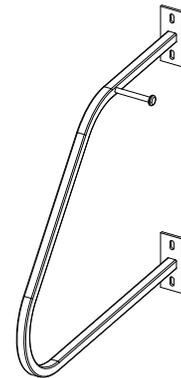

ULTRA SPACE SAVER SINGLE

Submittal Sheet

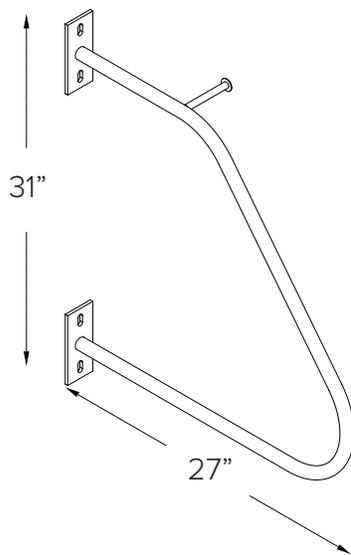

CAPACITY

1 Bike

MATERIALS

Body is 1" OD 11 gauge tube with 1/2" steel round bar hanger. Mounting flanges are 1/4" plate.

FINISHES

Black Powder Coat (Interior Use)

Our interior powder coat finish assures a high level of adhesion and durability for indoor use by following these steps:

1. Sandblast
2. Final thick TGIC polyester powder coat

Black Powder Coat (Exterior Use) *Additional Cost*

Our exterior powder coat finish assures a high level of adhesion and durability for outdoor or exposed air use by following these steps:

1. Sandblast
2. Epoxy primer electrostatically applied
3. Final thick TGIC polyester powder coat

MOUNT OPTIONS

Wall Mount

Wall mount has two 2.5" x 6" foot plates set 25" apart (centerline to centerline) with 4 fasteners. Can be set into concrete block, solid concrete, bricks, wood studs and other base materials .


TUBE OPTIONS

Round

Square

ULTRA SPACE SAVER SINGLE

Setbacks

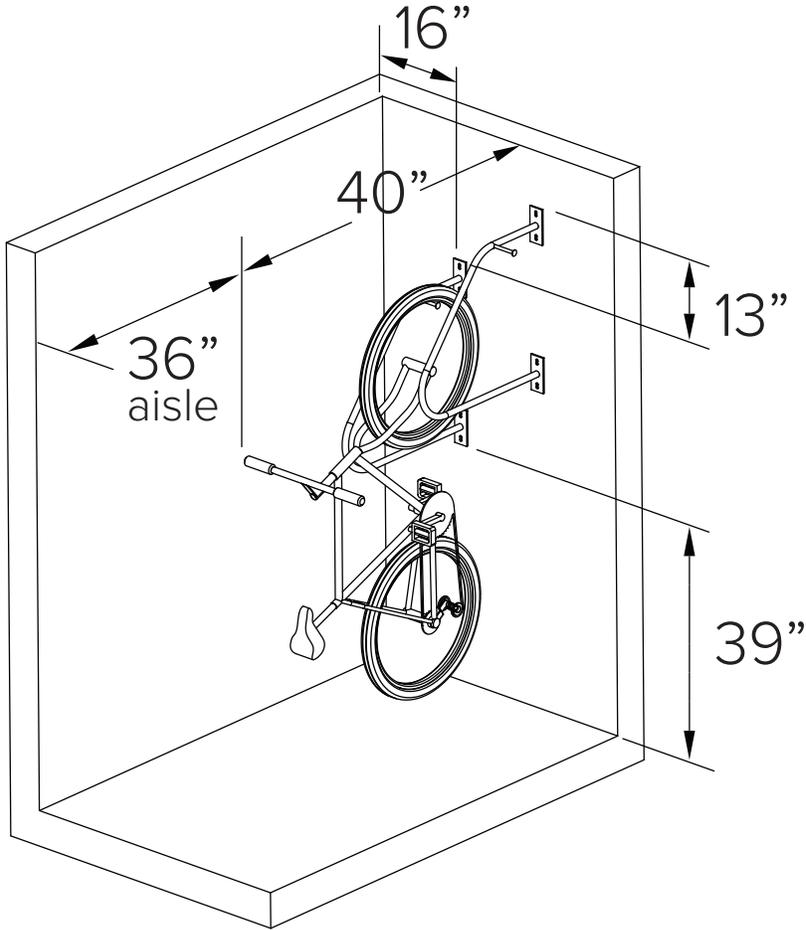


ULTRA SPACE SAVER SINGLE

Installation Instructions

TOOLS NEEDED


9/16" socket or wrench
Hammer
Drill (Hammer drill works best)
Level
Marker or Pencil

1

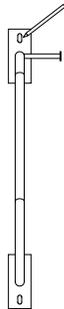

Place rack against wall. Mark holes and lower rack.


2

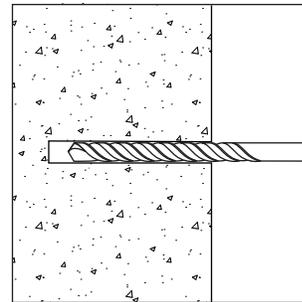

Sleeve anchors: Drill holes 2" deep with 1/2" diameter drill bit.
Wedge anchors: Drill holes 3" deep with 3/8" diameter drill bit.
Lag screws: Drill holes 3" deep with 9/32" diameter drill bit.
Titen anchor: Drill holes 3" deep with 3/8" diameter drill bit.
Concrete spikes: Drill holes 3" deep with 3/8" diameter drill bit.


If installing more than one rack, mark holes for each rack individually as there may be slight differences in the placement of holes from rack to rack.

3

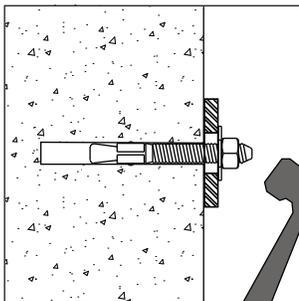

Place rack back into position against wall and tap anchors through holes in the rack and into the wall.

4

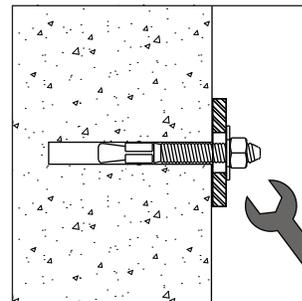

Tighten anchors