

BIKE BIKE RACK



Make A Statement

The Bike Bike Rack is an eye-catching, functional piece of street art. It welcomes people on bikes and provides them a secure, convenient place to park.

PRODUCT & PRICING INFO CONTACT

 **STREETSCAPES**
STREETSCAPES.BIZ

Info@streetscapefurniture.com ■ 303.398.7040

BIKE BIKE RACK

YOUR LOGO HERE

Customize the Bike Bike Rack and brand your bike parking



FINISH OPTIONS

Galvanized




Stainless



MOUNT OPTIONS

Surface

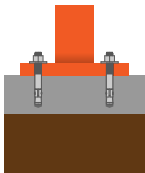

In-Ground




Powder Coat


White	Black	Light Gray RAL 7042	Deep Red RAL 3003	Yellow RAL 1023
CNH Bright Yellow	Orange RAL 2004	Blue RAL 5005	Sky Blue RAL 5015	Hunter Green RAL 6005
Light Green RAL 6018	Green RAL 6016	Sepia Brown RAL 8014	Bronze	Silver 9007
Dark Purple	Flat Black	Wine Red RAL 3005	Beige RAL 1001	Iron Gray 7011

BIKE BIKE RACK

Submittal Sheet

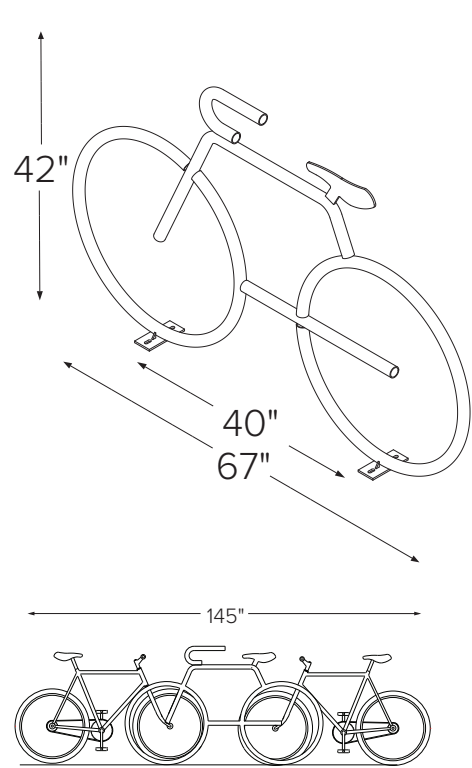


CAPACITY	2-4 Bikes
MATERIALS	1.5" OD 11 Gauge Tube. All open ends are capped to prevent moisture from entering. All welds are MIG welds around entire circumference of joined pieces.
FINISHES	<div><input type="checkbox"/> Galvanized An after fabrication hot dipped galvanized finish is our standard option.</div> <div><input type="checkbox"/> Powder Coat Our powder coat finish assures a high level of adhesion and durability by following these steps: 1. Sandblast 2. Epoxy primer electrostatically applied 3. Final thick TGIC polyester powder coat</div> <div><input type="checkbox"/> Stainless Stainless Steel: 304 grade stainless steel material finished in either a high polished shine or a satin finish.</div>
MOUNT OPTIONS	<div><input type="checkbox"/> In-ground In ground mount is embedded into concrete base. Specify in ground mount for this option.</div> <div><input type="checkbox"/> Surface Each rack has two 2.5" x 6" mounting brackets double gusset welded to the "wheels". The brackets are 40" apart. Each bracket is anchored to the ground with two anchors. Anchors are included with each rack.</div>

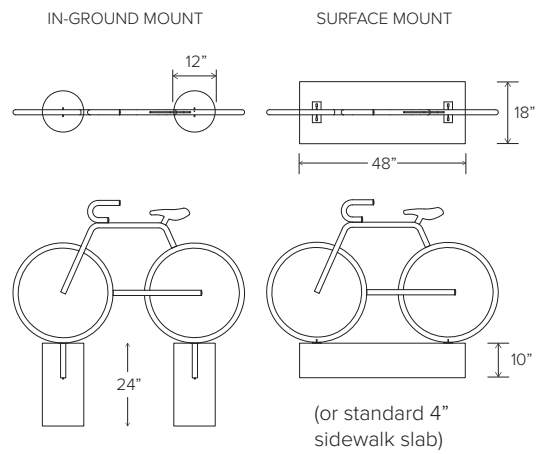

BIKE BIKE RACK

Setbacks

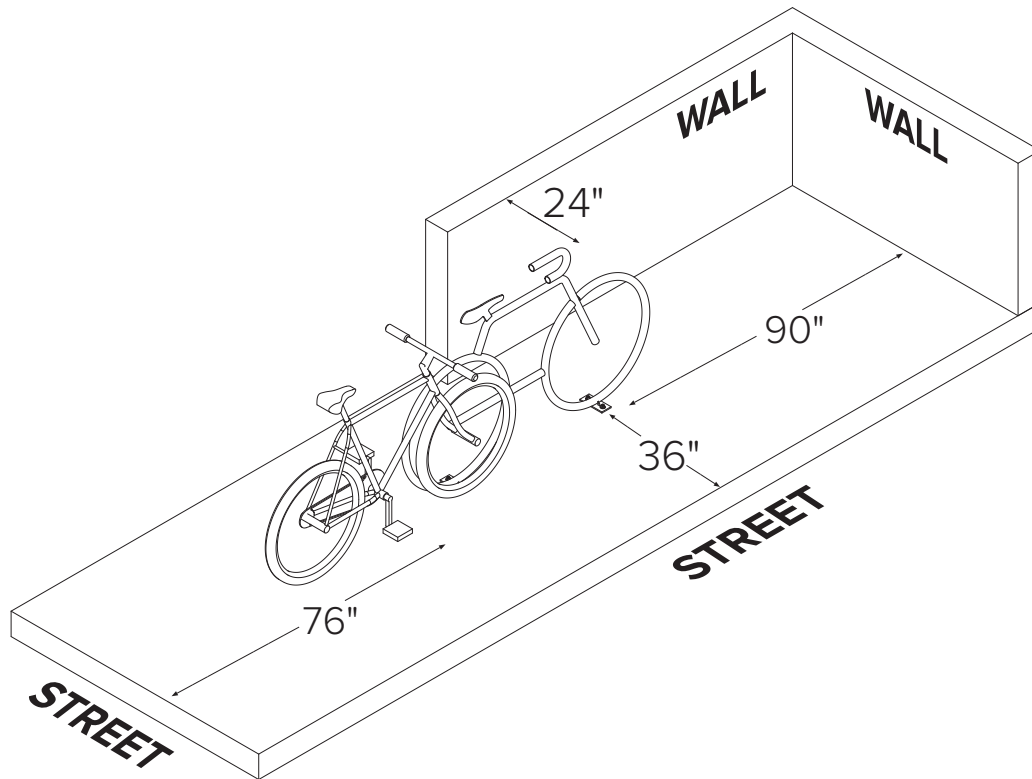

BIKE BIKE RACK

Installation Instructions – Surface Mount


TOOLS NEEDED

Tape Measure
Marker or Pencil
Masonry Drill Bit
Drill (Hammer drill recommended)
Hammer
Wrench 9/16"
Level

RECOMMENDED BASE MATERIAL


Solid concrete is the best base material for installation. To ensure the proper anchors are shipped with your rack, ask your Dero Rack representative which anchor is appropriate for your application. Be sure nothing is underneath the base material that could be damaged by drilling.

1

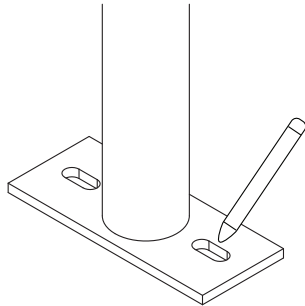


Place the rack in the desired location. Use a marker or pencil to outline the holes of the flange onto the base material.

2

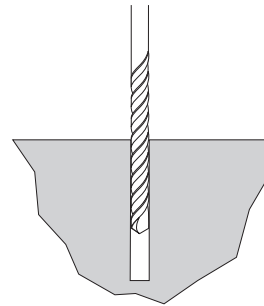


Drill 3/8" diameter holes 3" deep into surface. Make sure the holes are at least 3" away from any cracks in the base material.

3

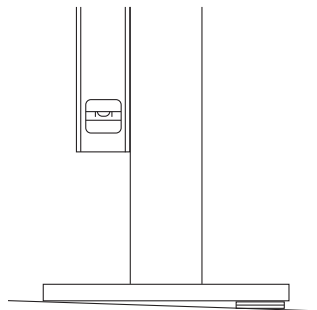

Place rack (and washers to level rack if necessary) over holes.

4

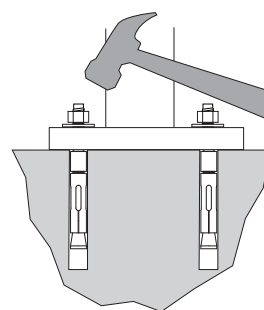

Thread nuts onto anchors, leaving approximately 1/4" of the anchor protruding, and tap into surface. Tighten nuts down to secure rack.

BIKE BIKE RACK

Installation Instructions – In Ground Mount


TOOLS NEEDED

Level	Hole coring machine with 4" bit
Cement mixing tub	Access to water hose
Shovel	Materials to build brace (see "Install Tip" at bottom of page)
Trowel	


INSTALLING INTO EXISTING SIDEWALK

Core holes no less than 3" diameter (4" recommended) and 10" deep into sidewalk. Fill holes with Por-Rok or epoxy grout. Place Bike Bike Rack into holes, making sure the rack is level. 33"-36" of the Bike Bike Rack should remain above the surface. If the Bike Bike Rack is less than 33" high, it will not support the bike adequately. Make sure the rack is level and held in place until the grout has set.


INSTALLING INTO A NEW SIDEWALK

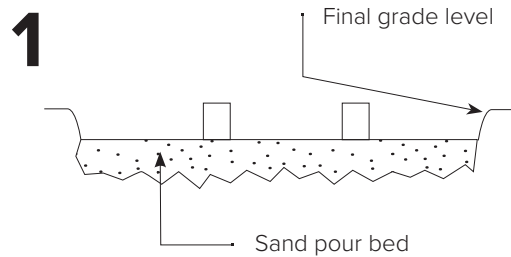


Place corrosion resistant sleeve (min. 4" inside diameter) in sand pour bed in exact location where rack will be installed. Make sure top of sleeve is at same level as desired finished concrete surface. Fill sleeve with sand to keep it in place and prevent it from filling with concrete.

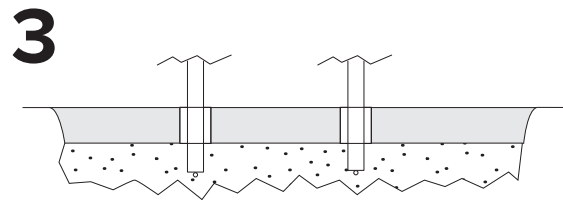

After appropriate cure time, dig out sand from sleeves and insert racks, making sure they are level and at the appropriate height. Pour in Por-Rok or epoxy grout and allow to set.

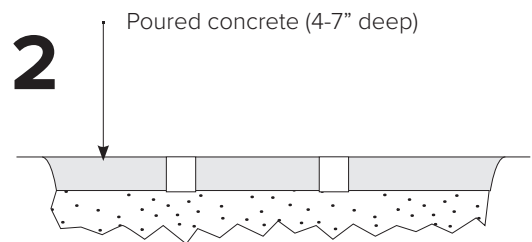

Pour concrete and allow to cure.

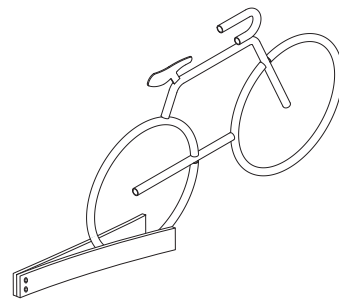

INSTALL TIP

An easy way to brace the Bike Bike Rack while the grout sets is to bolt two 1x4" boards together at one end and clamp them onto the legs of the Bike Bike Rack like a clothes pin.